



## CECT326-SSO Screwdriver Controller Operation Manual

**CAUTION** - Please read, understand, and follow all operating and safety instructions in this manual before using the CECT326-SSO controller.

This controller is designed for use exclusively with Delta Regis brand 'CESL3' series screwdrivers. Do not attempt to use this controller with any other tools.

**If you have any questions or concerns, please contact us at:**

**Delta Regis Tools, Inc.**  
3315 Industrial 25th St.  
Ft. Pierce FL 34946  
USA

**Ph +1-772-465-4302**  
**Fx +1-772-465-4368**  
**E-mail: sales@deltaregis.com**  
**Website: www.deltaregis.com**

## Important - Installation and Safety

**Warning - Failure to understand and follow proper installation guidelines, safety requirements, and operating instructions may result in malfunction, component damage, property damage, shock hazard, fire hazard, injury or death.**


1. Please read and understand the operation manual and follow all safety and operation instructions.
2. Place the controller in a suitable dry, indoor location. Do not use this controller in damp, wet or high temperature environments. Do not use in the presence of flammable liquids or gases.
3. Ensure that the controller has proper ventilation. Do not expose the controller to areas subject to airborne contaminants (eg. dust, metal filings).
4. Use only a properly grounded electrical outlet of the correct supply voltage to power the screwdriver controller. Ensure that the supply outlet is overload protected and of sufficient amperage capacity.
5. Use only the correct plug for the controller and outlet. Hold the plug of the power cord when connecting or disconnecting. Do not pull on the cable.
6. Do not expose the cable or controller to oil, chemicals, or heat. Ensure that the cable is routed and used in such a manner as to not be subject to sharp objects that may abrade or cut the cable.
7. Locate the controller in a suitable, safe location on a steady surface. Do not place in a high location where there may be a risk of it falling. Secure the controller in position to prevent possible movement caused by pulling on the power or tool cables.
8. Do not cover the controller or stack any objects on top of or near the controller. Ensure that adequate clearance and ventilation is provided around the perimeter of the controller.
9. The CECT326-SSO Controller is for use exclusively with Delta Regis brand 'CESL3' series screwdrivers. Use of this controller with any other tool may result in malfunction, damage, or injury.
10. In the event that the controller is overloaded beyond the maximum current rating, an internal fuse will disrupt power. Should the controller stop functioning, or exhibit abnormal or intermittent operation, please discontinue use immediately and send the controller to an authorized service centre for troubleshooting and repair.
11. Excessive duty cycle will cause the tool and/or controller to overheat. If this occurs, discontinue use until cooled down and reduce cycle rate. As a general rule, do not exceed 10-15 screws/minute.
12. The 'CESL3' series screwdrivers incorporate a protection circuit which stops the electric screwdriver if the tool is switched from forward to reverse while running. Should this happen, the operator must release the tool trigger and restart the fastening cycle.
13. Turn the main power switch off when the controller is not being used. Unplug the controller if it is not being used on a regular basis.
14. Do not attempt to disassemble or repair the screwdriver or controller. Repairs should only be performed by qualified technicians properly trained in the safe operation, troubleshooting, and repair of these devices. Please consult Delta Regis for the location of the nearest service depot.
15. Use only the factory specified Delta Regis brand replacement parts and accessories with these tools and controllers.
16. Any damage to the tool and/or controller resulting from misuse, abuse, or failure to follow these guidelines will void the limited product warranty.

**Grounding** - This controller (and AC power cord) is equipped with a 3-prong electrical receptacle/plug with ground pin. The controller must be connected to a properly grounded AC electrical outlet. Do not attempt to use this controller without a properly functioning ground connection. Never connect a live circuit to the ground pin or internal yellow-green ground wire.

## Specifications

<b>Model Number</b>	CECT326-SSO
<b>Input</b>	100-240V AC, 50/60Hz, ~1.2A
<b>Output</b>	32VDC (Hi) / 20VDC (Lo), 1.8A / 3A, 60W
<b>Speeds</b>	Hi / Lo (switch selectable)
<b>Use with screwdriver models</b>	All 'CESL3' series screwdrivers
<b>Slow Start Function</b>	
	Selectable ON / OFF
<b>Slow Start Time Adjustment</b>	0 - 9.9 seconds
<b>Slow Start Speed Adjustment</b>	60 - 100% of rated speed
<b>Count Method (selectable)</b>	
	Count up to total / count down from total
<b>Count Setting Range (rundowns/batch)</b>	1-99
<b>Time Window Settings</b>	
Minimum acceptable rundown time	0.0 - 9.9 seconds (0.1 sec increments)
Maximum acceptable rundown time	0.0 - 9.9 seconds (0.1 sec increments)
<b>Audible Alarm Settings (selectable)</b>	
'On' sounds when	Good / No Good / Batch Complete
'OF' sounds when	No Good
'FF' sounds when	Batch complete / No Good
'EF' sounds when	Good / Batch Complete
<b>Input Connections</b>	
	Remote enable (eg - part in position)
	Clear (reset) count value
<b>Output Connections (24VDC, 10mA)</b>	
	Rundown OK, Rundown NG
	Batch complete
<b>Dimensions (L x W x H)</b>	150 x 130 x 48 mm
<b>Weight</b>	0.9 kg
<b>Approvals</b>	CE/RoHS/ETL
<b>Included Accessories</b>	
	AC power cord, suspension/support bail, input/output connector terminal block

## Controller Overview

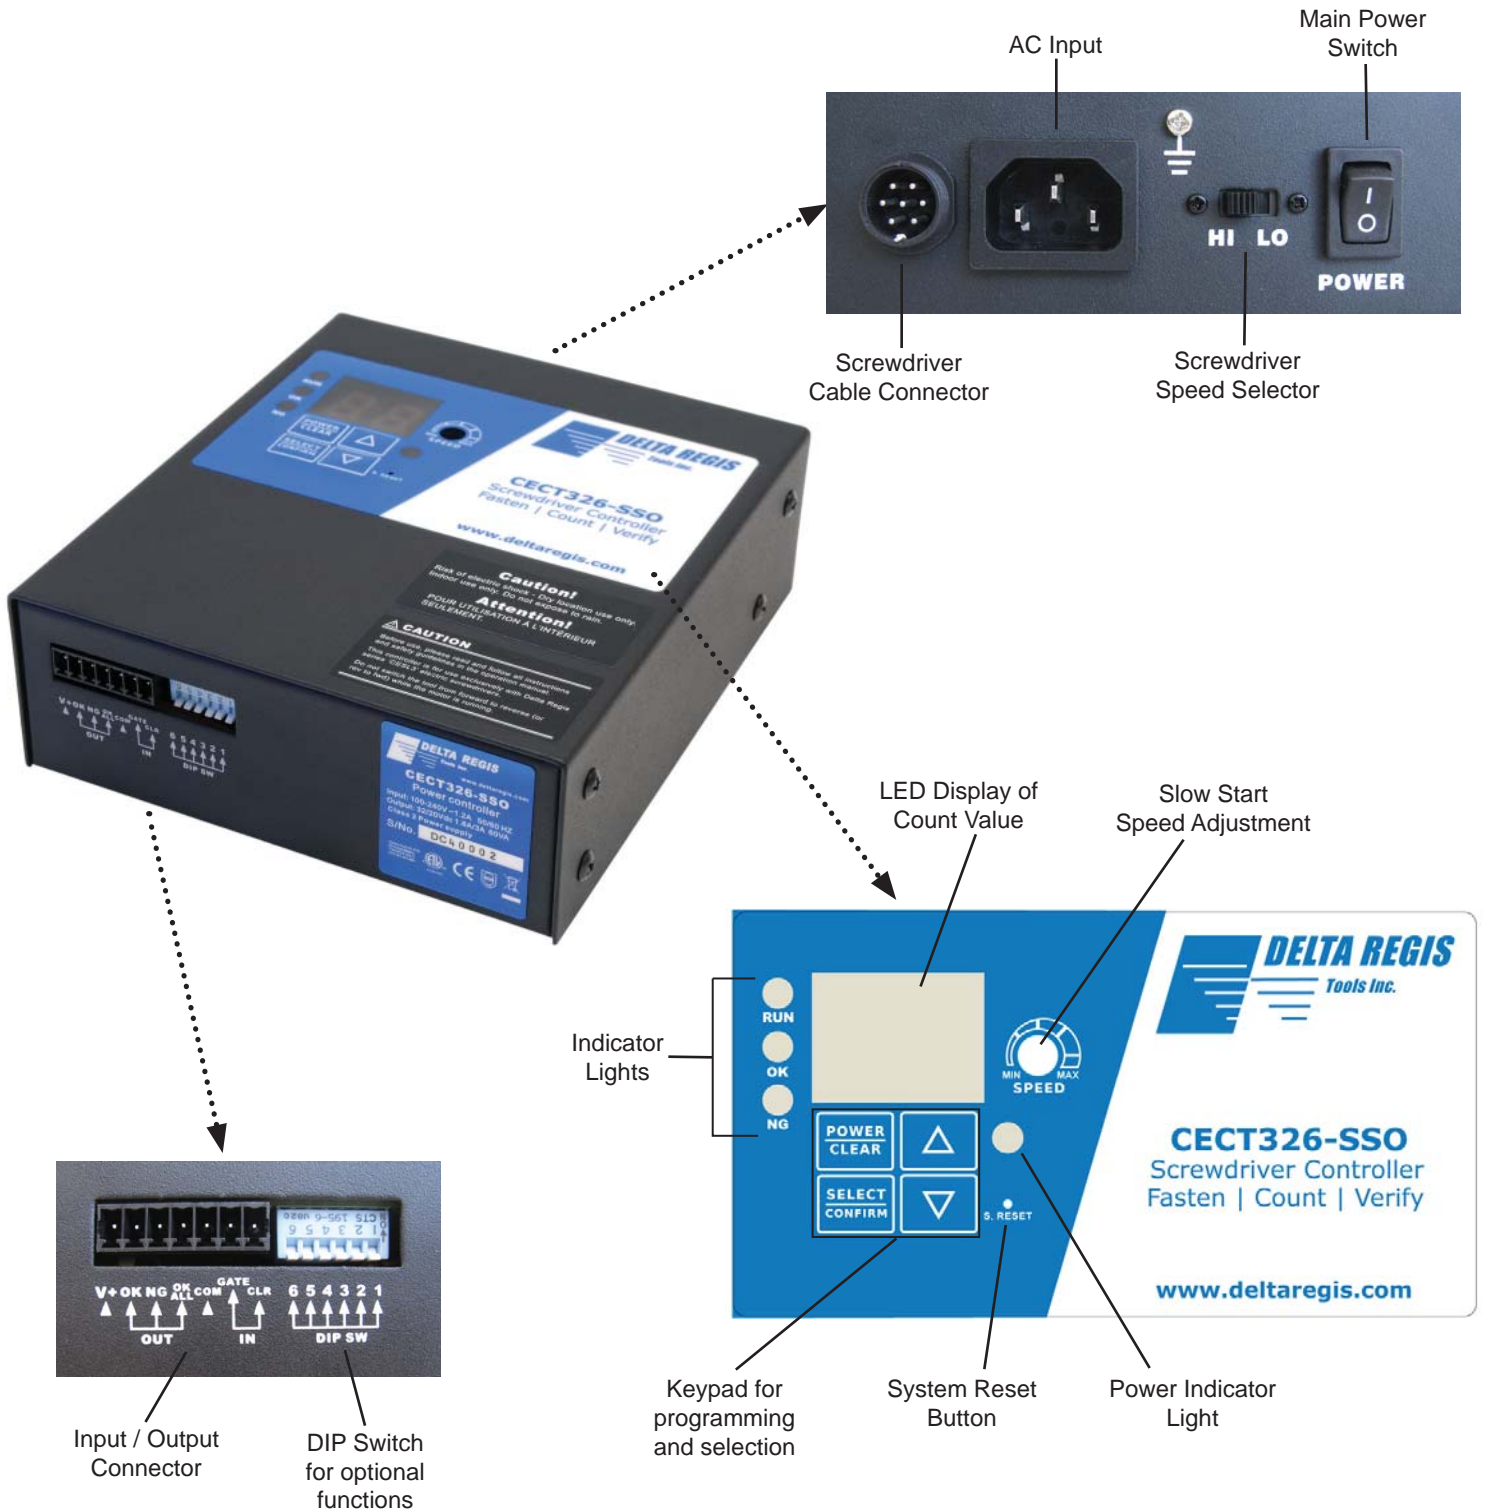

## Getting Started

Connect the 7-pin cable of any 'CESL3' series screwdriver from the tool to the controller. Ensure that the cable is installed in the proper orientation (spring guard at tool end) and that the connectors are seated properly with the fastening rings securely tightened.

Plug the controller into a properly grounded AC outlet. Turn on the main power switch at the cable end of the controller. The audible alarm will beep 3 times, the power indicator LED (green) and run indicator LED (orange) will light up, and the display panel will show a count value. Press the 'Power/Clear' button for 2 sec. to reset the batch count for a new batch.

## Keypad and Programming Basics

The 4 button keypad located beneath the display is used to input program parameters and to manually reset the batch count if required.



POWER/CLEAR

Press and hold the POWER/CLEAR button (5 sec) to turn off the programmable/counting functionality of the controller. The green power indicator LED will remain lit and the screwdriver is able to function as a standard driver with HI/LO speed capability. Pressing the POWER/CLEAR button again will turn the counting capability back on.

When operating in the counting mode, pressing POWER/CLEAR for 2 sec. will reset the batch count to the initial programmed batch value so that a new assembly cycle can begin.



SELECT/CONFIRM

The SELECT/CONFIRM button is used in conjunction with the UP/DOWN arrow keys to enter program parameters into the controller. The available settable parameters are Sequence Number (SL), Batch Count Value (SC), Reset Time at Batch Complete (Rt), Slow Start Time (RC), Max Acceptable Rundown Time (Ht), Min Acceptable Rundown Time (Lt), and Reconfirm Time (LL). To enter programming mode, press and hold the SELECT/CONFIRM key until SL appears in the display, followed by a flashing value. Please refer to the flow chart on the following page for further details of the programming sequence.



UP / DOWN

The UP / DOWN arrow buttons are used to adjust time and count values when the controller is in the programming mode. When the UP/DN arrows are pressed simultaneously, the controller indexes through the four available audible alarm settings. Further details are provided in the following pages.

## Programming / Entering Parameters


To enter Programming Mode, press and hold Select/Confirm (3 seconds) until 'SL' appears.

**Function ID Code**  
Displays momentarily, followed by value.

**Function Value**  
Numeric value for function - set by user.



Use the UP/DOWN arrow keys to adjust the numeric values for each function

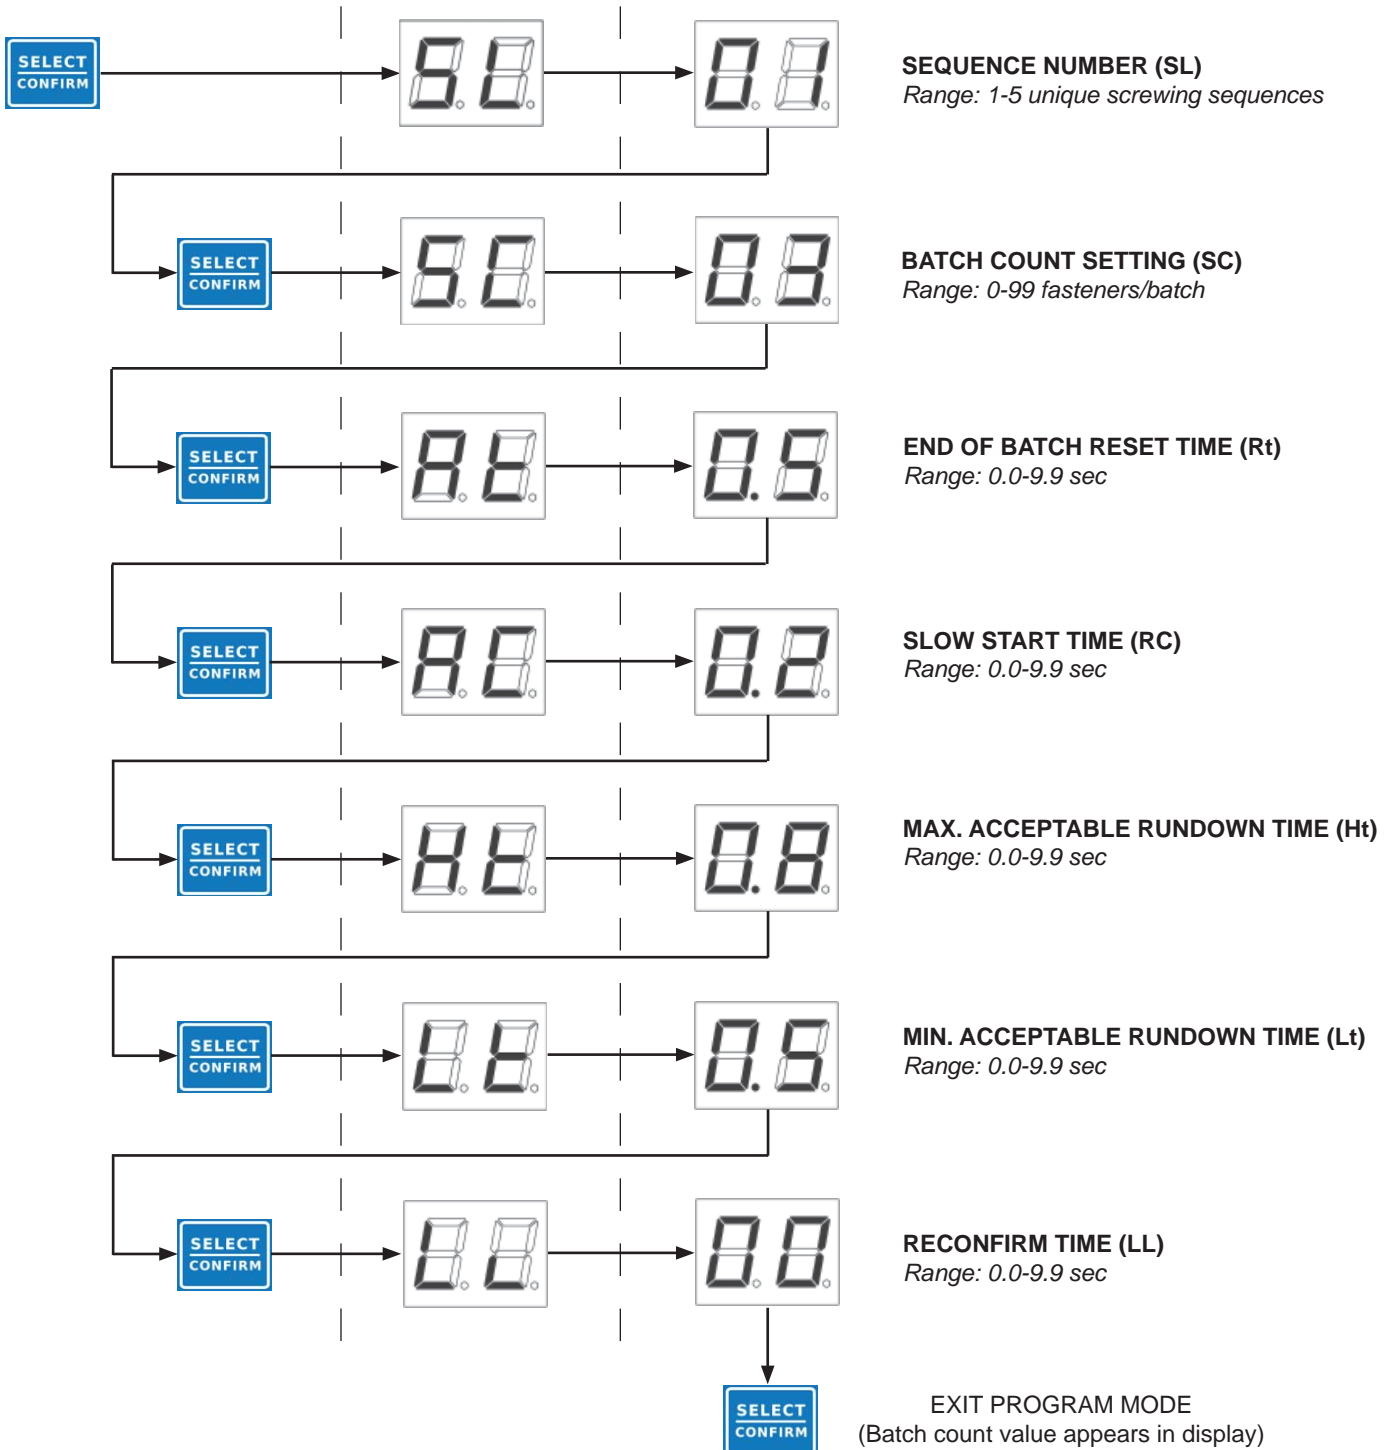



## SEQUENCE NUMBER (SL)

There are 5 programmable screw fastening sequences (SL='01' to '05') available. In many cases, only the first sequence (01) will be needed. If the screwdriver is used to install a batch of fasteners with varying requirements, multiple sequences may be necessary. For example, if an assembly requires the installation of 4 screws, where 3 screws are short and 1 screw is long, the controller can be programmed with 2 unique sequences - a sequence for the short screws and one for the long screws. This would allow different time windows to be set-up for the two different screw lengths.

Each sequence must be programmed separately, and numbered in the order that the screws will be installed (starting with Sequence 01). In this example, if the 3 short screws are to be installed first, enter the program for Sequence '01' with a batch quantity of 3 and time parameters for the short screw. Then repeat the program steps for Sequence '02' with a batch quantity of 1 and the time parameters for the long screw. Finally, program Sequence '03' with a batch quantity of '00' to signify that there are no further fasteners to install.

## BATCH COUNT SETTING (SC)

Enter the desired number of fasteners to be installed per batch. Depending on the setting of DIP switch #1, the display will either count down from the total batch value entered, or count up to the total batch value. The count will only increment (and indicate a 'GOOD' rundown) if the rundown cycle falls within the limits set by the min and max rundown time settings. A rundown cycle is the time interval from the moment that the tool is triggered by the operator until such time that the clutch trips when the tool reaches its torque setting. When all fasteners in the batch have been installed, the controller will indicate that the batch is complete and the count will reset for the next cycle.

If, after a good rundown, the operator runs the screwdriver in reverse, the batch count value will decrement by a count of one (based on the assumption that the operator is removing the last installed fastener).

The batch count can be reset to begin a new batch by pressing the POWER/CLEAR key.

## END OF BATCH RESET TIME (Rt)


When a rundown batch is completed, the controller provides a visual indication (OK light) and audible indication (depending on audible settings) that the batch is complete, followed by a reset of the display count for the beginning of the next batch. The END OF BATCH RESET TIME value determines how long these indicators will stay on before the batch count resets. Please note that the screwdriver can not be operated during this reset time period.

## SLOW START TIME (RC)

Please refer to the section entitled 'Screwdriver Speed Adjustments' for further information on the Slow Start function.

## MAXIMUM AND MINIMUM RUNDOWN TIME SETTINGS (Ht, Lt)

The controller determines whether a fastener rundown is deemed GOOD (OK) or NO GOOD (NG) by comparing the actual time taken for the rundown cycle to a time window programmed by the user. For example, a cross threaded screw will cause the screwdriver to shutoff too early (before min time) and a stripped screw will cause the driver to run too long (beyond max time).

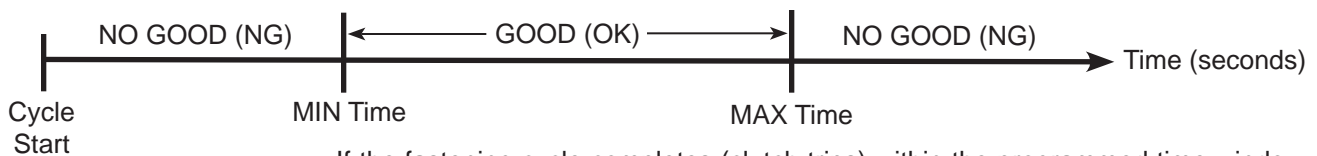

If the fastening cycle completes (clutch trips) within the programmed time window, the rundown cycle will be accepted as GOOD (OK) and the batch count will increment.

## RECONFIRM TIME (LL)

If the assembly process requires that the operator has the ability to 'double-hit' the fastener (release and retrigger the screwdriver on a fastener that has just been installed), a reconfirm time can be programmed into the control. During this time period (which immediately follows the completion of the rundown), the operator is able to re-trigger the tool without causing a No Good (NG) error signal to be generated.

## Screwdriver Speed Adjustments

The controller provides two speed control options for the tool - Hi/Lo running speed and optional slow start. A running speed of HI or LO may be selected via the slide switch at the cable end of the controller. Please refer to the screwdriver catalog specifications for the tool's free speed RPM at the HI and LO settings.

The controller also has a selectable Slow Start option. This option can be helpful in engaging screw threads properly to avoid cross-threading. The Slow Start is intended for initiating the fastener rundown only - the slow start time must be limited so that the tool switches to full speed before the fastener completes its rundown.

There are two separate adjustments for setting up the slow start function - time and speed. First set-up the slow start time by entering the desired slow start time value (0.0-9.9 sec) for Function 'RC' during the programming sequence. Refer to the programming flow chart for further details on entering parameters.

Once a slow start time has been programmed, set and test the slow start speed. Using a small Phillips screwdriver, carefully adjust the SPEED potentiometer (located to the right of the display) between the MIN and MAX settings. Engage the start (trigger or push) on the screwdriver to check the settings and make adjustments until the desired result is achieved. Do not attempt to rotate the SPEED adjustment beyond the stops at either end. Any application of excessive force can damage the potentiometer.

## Audible Alarm Settings / OK and NG Lights

Along with the two digit count display, the controller also provides visual and audible indication of rundown OK, rundown NG, and batch complete.

The OK (green) and NG (red) lamps indicate whether the rundown was GOOD or NO GOOD. If the rundown is within the set parameters, the OK lamp will light up at the end of the rundown cycle. If the rundown is no good, the NG lamp will light at the end of the rundown. When the fastening batch is completed, the OK lamp will light up and the batch count value will reset after a time delay determined by the value programmed into the END OF BATCH RESET TIMER.

To suit individual user preferences, four variations of the audible alert are available. When active, the audible alert provides a single short beep for rundown OK, a single long beep for batch complete, three short beeps for rundown NG (below MIN time setting) and five short beeps for rundown NG (above MAX time setting).

The four available audible settings are:

<b>ON</b>	- sounds when...	OK / NG / Batch Complete
<b>OF</b>	- sounds when...	NG
<b>FF</b>	- sounds when...	NG / Batch Complete
<b>EF</b>	- sounds when...	OK / Batch Complete



Press the UP & DOWN arrow keys simultaneously to choose the next available audible alarm setting.

To change the audible alert setting, with the controller in operating mode (not in programming mode), press the UP and DOWN arrow keys simultaneously. The controller will loop to the next available audible setting and show the new current audible setting value in the display.




## Input / Output Connector


An input/output connection is provided on the front face of the controller for interfacing signals with external equipment. The mating plug for the connector (with screw terminals) is included in the box with the CECT326-SSO. Each of the 7 pins is labelled and their function is as follows:

**V+**  
DC voltage (+32VDC on HI / +20VDC on LO) available to power external circuits


**OK**  
Outputs a signal when an acceptable (GOOD) rundown cycle is completed

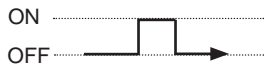

**NG**  
Outputs a signal when an unacceptable (NG) rundown cycle occurs

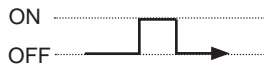



**OK ALL**  
Outputs a signal when the batch is completed

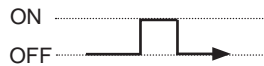

**COM**  
Common (0VDC) - used when wiring in external input switches

**GATE**  
Input for external switch(es) verifying that the driver can be enabled to begin a new batch. *The controller's use of external switches is dependent on DIP Switch Settings. Please see next page for further details.*

**CLEAR**  
Input for external resetting of the batch count

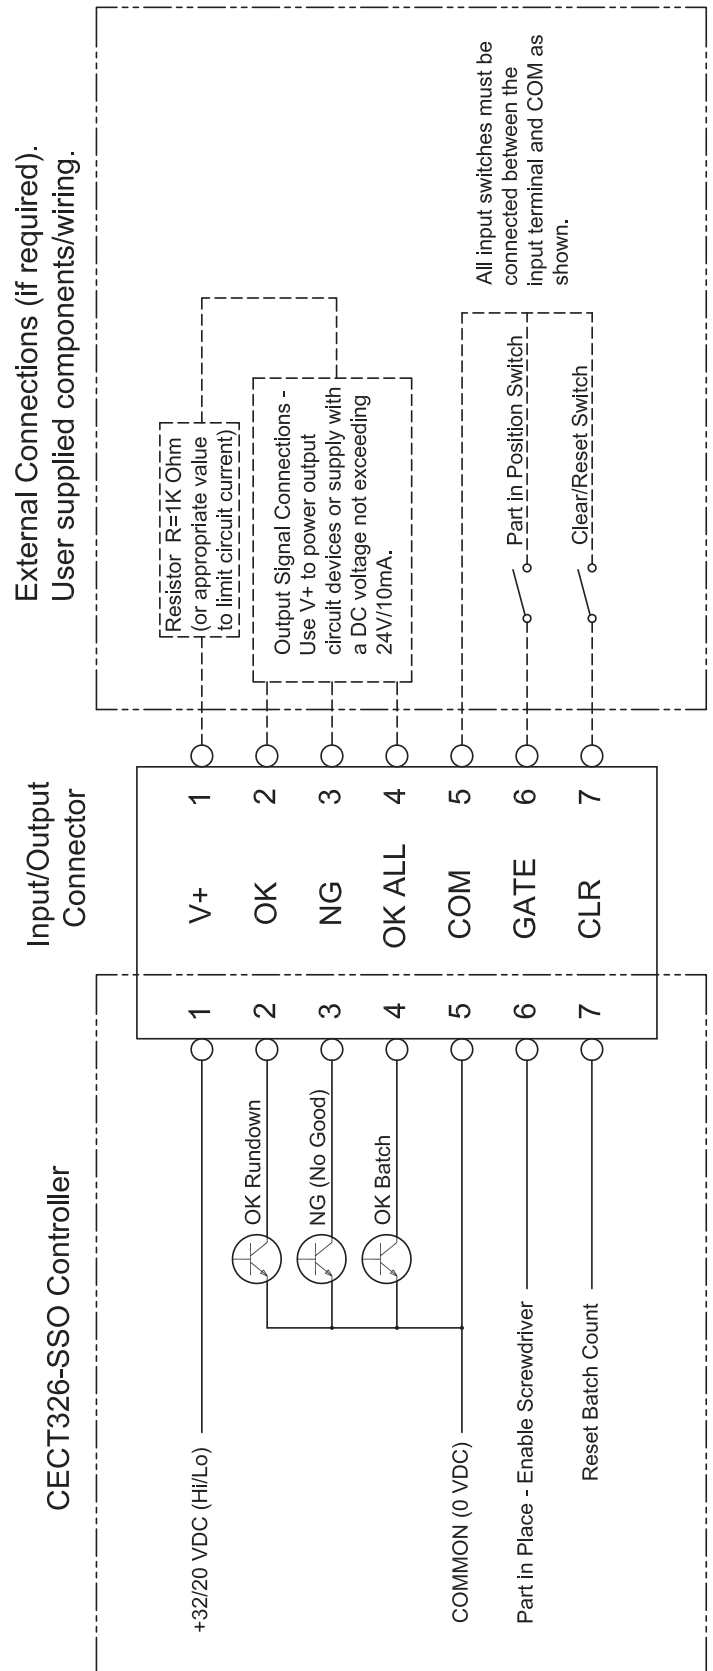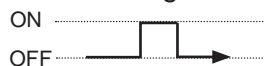

## DIP Switch Settings

There is a 6-position DIP Switch mounted in the front face of the controller, next to the I/O Connector. The controller is shipped from the factory with all switches in the OFF (down) position. Please refer to the following guide to select the proper switch positions to suit your specific application.



### SW 1 - Counting Method

Determines whether the controller counts up from zero to the programmed batch value, or counts down from the batch value to zero. OFF = Count Down, ON = Count Up

### SW 2 - External Switch (GATE Input)



If the process requires that an external input signal be present (at the GATE input) to allow the screwdriver to enable to start a new batch, then SW2 must be in the ON position. When SW2 is OFF, the external GATE input signal is not required. Refer to the diagrams below (SW 4 description) for further details on input signals and signal logic.

### SW 3 - Manual Confirm to Reset Batch

With SW3 in the OFF position, the controller automatically resets to begin a new counting batch after completion of the previous batch. Placing SW3 in the ON position will require the operator to press the SELECT/CONFIRM button at the end of each batch before the controller will reset to run a new batch. Upon batch completion, the LED display will flash 'C3' and the screwdriver will be disabled until the SELECT/CONFIRM button is pressed.

### SW 4 - Multiple External Switch Inputs (GATE Input)

In some instances, it may be desirable to interface two external input switches wired in parallel to the GATE input. As an example, one switch might be triggered by a finished part leaving the assembly station while the other is triggered by a new part entering the station. With SW4 in the OFF position (and SW2 ON), one external switch signal is required to enable the screwdriver. With SW4 in the ON position (and SW2 ON), two external switch signals are required to enable the driver.

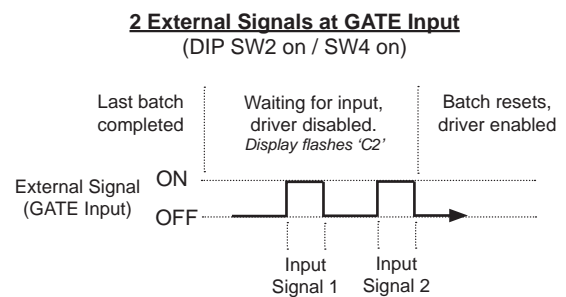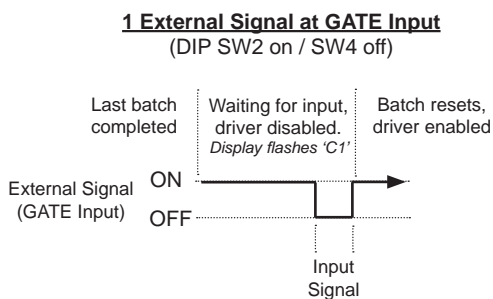

### SW 5 - Evaluate Rundown Time

When SW 5 is moved to the ON position, the controller enters a rundown evaluation mode, which can assist in determining proper time window settings to program for the application. The operator will be allowed to run multiple rundown cycles (as many as desired) and the display will show the actual cycle time for each rundown as it is completed. Certain program parameters must be entered after SW 5 is turned on, before the actual testing can start. Please keep in mind that the fastener rundown time will change if any adjustments are made to running speed (Hi/Lo), slow start speed (potentiometer), or slow start time. It is important that these adjustments are finalized before using this rundown evaluation procedure.

The test sequence is as follows:

*(Note: The parameter setup portion of this test follows the standard programming flow chart outlined earlier in the manual. Please refer back for further information, if required.)*

1. Move DIP SW5 to the ON position.
2. The display flashes a numeric value - this value is the sequence number (SL) that the controller will use for setup of the rundown parameters. If you wish to use a different sequence number, use the UP/DN arrow keys to change.
3. Press SELECT/CONFIRM. 'SC' will show in the display, followed by a value. Adjust the value to the desired 'batch count setting' for your application.
4. Press SELECT/CONFIRM. 'Rt' will show in the display, followed by a value. Adjust the value to the desired 'end of batch reset time' for your application.
5. Press SELECT/CONFIRM. 'RC' will show in the display, followed by a value. Adjust the value to the desired 'slow start time' for your application.
6. Press SELECT/CONFIRM. The display flashes '0.0'. The tool is now ready to run tests. Use the screwdriver to rundown the fastener on the application. The display will count up time in 0.1 second increments until the cycle completes. Once complete, the cycle time will show in the display. Repeat the rundown as many times as required.
7. Move SW5 to the OFF position. The controller will program the last recorded rundown time as the sequence's Max. Acceptable Rundown Time (Ht) value. The controller returns to normal operation mode and displays the batch count value.
8. Enter the Programming Mode (press and hold SELECT/CONFIRM for 3 sec) to review the settings and make final adjustments to the program values. *Please refer to the programming flow chart for further details on settings and values.*




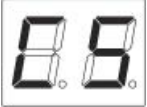

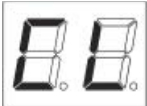


### SW 6 - Multiple Rundown Sequences

With SW6 in the OFF position, the controller will run only the current program sequence to complete the batch - it will not step to the next programmed sequence, even if multiple sequences have been entered.

If you have multiple sequences programmed which you wish to run sequentially (*see Sequence Number (SL) on the programming page*), setting SW6 to ON will cause the controller to step through the programmed sequences in order until they have all been completed. A batch complete signal will be output once all sequences have completed, and the controller will loop back to the start of sequence SL01 to start the next batch. Note - if the controller encounters a sequence with a screw batch count (SC) entered as zero, the controller identifies this as the end of the batch sequences and will loop back to the beginning to start a new batch.

## Display Codes

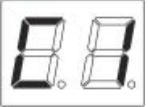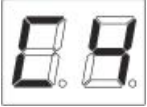When waiting for operator or external input, the LED display will show one of a series of codes, depending on the DIP switch settings and the expected input. Further explanation is provide below.

	<p><b>Waiting for input from a single external switch connected to GATE input.</b></p> <p>DIP Settings - SW2(On), SW3(Off), SW4(Off)</p>		<p><b>Waiting for input from 1 external switch and manual SELECT/CONFIRM.</b></p> <p>DIP Settings - SW2(On), SW3(On), SW4(Off)</p>
	<p><b>Waiting for input from two external switches connected to GATE input.</b></p> <p>DIP Settings - SW2(On), SW3(Off), SW4(On)</p>		<p><b>Waiting for input from 2 external switches &amp; manual SELECT/CONFIRM.</b></p> <p>DIP Settings - SW2(On), SW3(On), SW4(On)</p>
	<p><b>Waiting for operator to press SELECT/CONFIRM to verify batch reset.</b></p> <p>DIP Settings - SW2(Off), SW3(On), SW4(Off)</p>		<p><b>Waiting for operator to press CLEAR.</b></p>
	<p><b>Error detected during input of confirmation signal. Press SELECT/CONFIRM again to acknowledge.</b></p>		<p><b>Incorrect set-up during programming mode.</b> Example 'Lt (min time) value entered is &gt; Ht (max time) value'.</p>

## Service

The CECT326-SSO Controller is not user serviceable. Any repairs must be performed by a Delta Regis authorized service center. Please consult Delta Regis Tools for further information and the location of the nearest authorized service center.

Repairs to 'CESL3' series screwdrivers must be performed by trained personnel, knowledgeable and qualified in the repair of DC electric screwdrivers. Use only genuine Delta Regis parts when servicing these products.

Do not attempt to modify the tools or controllers.

## Warranty

The CECT326-SSO Controller is warranted for one year from the date of purchase against defects in material and workmanship. This warranty does not cover damage due to transportation, abuse, misuse, or improper service. Our sole remedy is to repair or replace (at our discretion) any unit found to be defective due to defects in material or workmanship. It is the responsibility of the user to return any product thought to be defective, freight prepaid, to our warehouse for inspection and evaluation.

There is no warranty of merchantability or fitness of purpose. In no event will Delta Regis Tools, Inc. be liable for business interruptions, loss of profits, harm, injury, damage, personal injury, cost of delay, or any other special, indirect, incidental, or consequential losses, costs, or damages.